

## Auto Fill-up Float Collar Conventional/non rotating -SH19-AF

Available in 5 1/2" to 20 "sizes + any special sizes



Sledge Hammer's Auto fill float valve permits the casing to fill automatically while being run into the hole. The valve is always in open position, allowing maximum filling of the casing as it running in the well bore. This is especially effective on liner job and sensitive hole conditions. Auto Fill up float shoe can be provided in conventional as well as with non rotating profile.